

# Anchor Vista DirectFive Assembly Guide



## Package Content



1x  
Anchor Vista  
DirectFive



1x  
RJ45 Feed-thru Lock  
Connector



4x  
BOSSARD 2000598  
/WN 1412



1x  
quickMOUNT  
PRO LHG

## Accessories (not included)



1x  
Wall Mount  
Metal Bracket

**sewio.net**

email: [info@sewio.net](mailto:info@sewio.net)  
phone: +420 511 205 215

# 1. Anchor to Holder

1x Anchor Vista DirectFive



1x quickMOUNT PRO LHG (PN: SWC11-00-00)

quickMount holder package contains screws which **do not fit into Anchor Vista enclosure**, therefore Anchor Vista is delivered with the correct one. Following screws are recommended: PN: **BOSSARD 2000598 or WN 1412**



4x BOSSARD 2000598 or WN 1412




1x RJ45 Feed-thru lock Connector (RCP-00BMMS-TLM7001)



4x BOSSARD 2000598/WN 1412

RJ45 Feed-thru Lock Connector

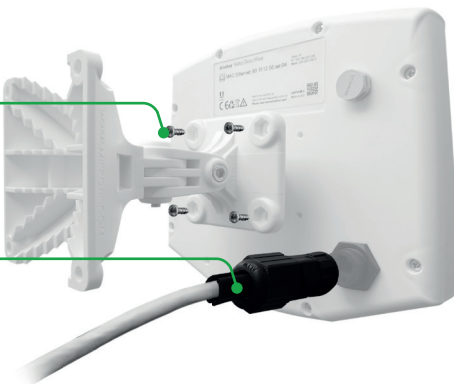

# 2. Wall Mount

1x Wall Mount Metal Bracket

Short 15 cm or Long 25 cm

WaveRF PK15I32 (PN: SWC10-02-00)

Metal console for Anchor Vista placement with quickMount PRO LHG holder.



1x Steel Belt



2x Screw with Dowel for Wall Mount

